


LED flush mount with an **integrated multi-mode sensor** and **selectable colour temperature**. Read the whole guide before you start.

⚠ SAFETY

- Read and understand this entire guide before attempting to assemble, operate or install the product. Failure to do so could lead to electric shock, fire or other injuries that could be hazardous or even fatal.
- **Make sure the power is shut off** to the wires you are working on: remove the fuse or turn off the circuit breaker.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This product can **only be dimmed with a triac system**.
- This product must be installed in accordance with local, provincial/state and national electrical codes.
- Installation work shall be completed by a licensed installer who is familiar with the construction and operation of the product.

PACKAGE CONTENTS

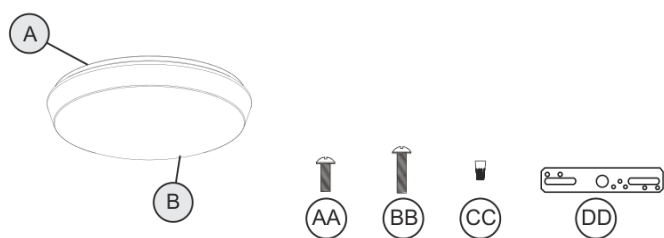


PARTS


Part	Description	Qty
A	Fixture pan (base)	1
B	Diffuser lens (pre-installed)	1
AA	Short screws	2
BB	Long screws	2
CC	Wire nuts	3
DD	Crossbar (not to scale)	1

INSTALLATION

- 1** Rotate the diffuser (**B**) and pull it up as shown.

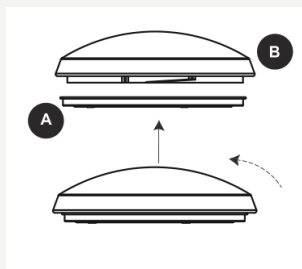


- 2** Select the desired **colour temperature** and **sensor mode** before putting the diffuser back.

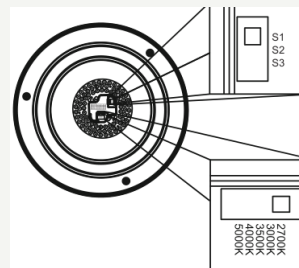


S1 / S2 / S3: sensor modes (table below) - 2700K, 3000K, 3500K, 4000K, 5000K: colour temperature.

- 3** Insert the mounting screws (**AA**) about **1.0 inch** into the junction box (do not screw them all the way).

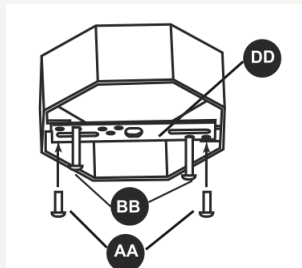


- 4** Connect: **L to L, N to N, GND to GND**.

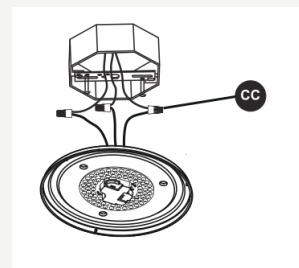


CC = wire nuts.

INSTALLATION (CONTINUED)

- 5 Place the fixture pan (A) over the pre-installed mounting screws: the screws should align with two of the screw holes. Rotate the fixture pan (A) clockwise, then screw them all the way.

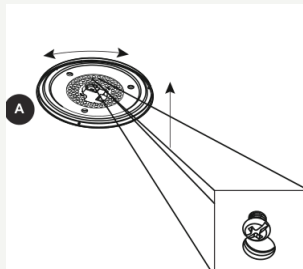

- 6 Assemble the diffuser (B) back.

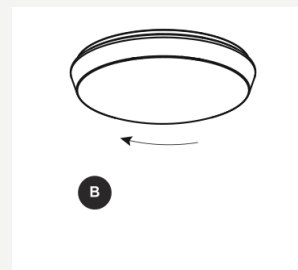

SENSOR MODES

Multi-mode sensor	S1	S2	S3
Hold time	10 min	20 min	20 min
Dim down to	50%	50%	30%
2nd hold time	10 min	n/a	n/a
2nd dim down	Off	n/a	n/a

CARE AND MAINTENANCE

Clean with a mild, non-abrasive glass cleaner and a soft cloth. Do **not** use solvents or abrasive cleaners. Turn off the power before cleaning and spray the cleaner on the cloth, never directly on the fixture.

TROUBLESHOOTING

Problem	Possible cause	Corrective action
Fixture does not light.	1. Power is off. 2. Incorrect wire connection. 3. Defective wall switch.	1. Check the circuit breaker or wall switch. 2. Check the wire splices. 3. Replace the switch.
Circuit breaker trips when the light is turned on.	Crossed wires or power wire grounded out.	Verify that the wires are correctly connected.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.