


LED doorway wall pack with **selectable wattage and colour temperature** by switches. Applications: industrial lighting, landscape lighting, courtyards, buildings, hotels, building exteriors, etc. Read the whole guide before you start.

⚠ CAUTION


- Do not use an electric generator to test the LED fixture.
- Follow the applicable national, regional and local laws and regulations when installing this fixture.
- Do not install the fixture in the rain, to lower the risk of electric shock and avoid failure.
- To avoid any risk of electric shock or fire, the installer must have **professional electrical knowledge**.
- Wear **gloves** to avoid injury during installation.
- If a wire smokes or sparks, **turn off the power immediately** and notify the relevant personnel.

INSTALLATION


1 Turn off the power.

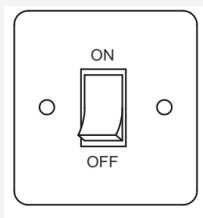


2 Remove the rubber plug and loosen the 4 screws.

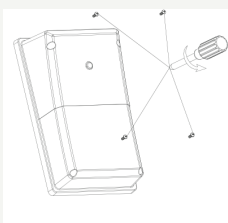


3 Remove the 1/2 in. end cap.

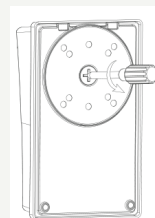


4 Peel off the yellow sticker and paste it on the round area of the bottom plate.

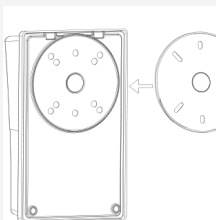

5 Fix the bottom plate on the round plate.

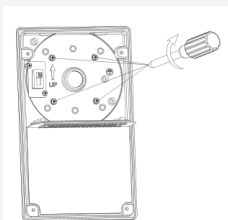


6 Make the wiring connections and make sure they are well protected.

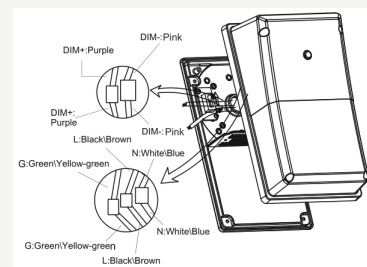


DIM+: purple · DIM-: pink · L (line): black or brown · N (neutral): white or blue · G (ground): green or yellow-green.


7 Fix the fixture with the 4 screws and block the two holes with the rubber plugs.

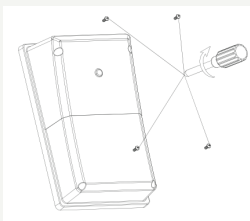

8 Make sure the wiring is good and the screws are tight, then turn on the power.

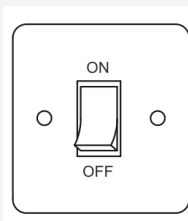

COLOUR TEMPERATURE

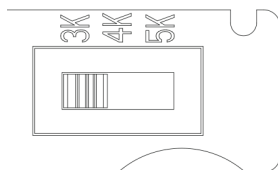

DIP switch at **3K**: 3000K · at **4K**: 4000K · at **5K**: 5000K.

WATTAGE



Move the DIP switch to another position: the fixture changes to the corresponding wattage. Depending on the fixture, the positions are marked **I · II · III** or **L · M · H**: **L (I)** = low, **M (II)** = medium, **H (III)** = high wattage, i.e. 9 · 12 · 15 W (LCWPDR-15W) or 20 · 25 · 30 W (LCWPDR-30W).